# **Data Sheet**

# ltem

 
# 1. Product description:

Diamond Wheel for Grinding and Sharpening

Dimensions (in):	6" x 1/4" x 1-1/4"
Dimensions (mm):	150 x 6 x 31.75
Specification:	D140R50LBX8C06R
Max. rpm:	6,400
Line:	Easy-Cut®
Max. speed:	50 m/s







D=	150	mm
T =	6	mm
H=	31.75	mm
$\mathbf{X} =$	3.2	mm



#### Certification

This wheel is certified by the Organization for the Safety of Abrasives.





Diamond



140 = Fine







R = Medium 50 = Low



L = Aluminum B = Resin

## 1. Application

- Wheel for machining, tool sharpening, and grinding of flat and cylindrical carbide surfaces.
- For users where price is an important factor.

#### 2. Operating instructions

- · Inspect the product to ensure it is not cracked or damaged before starting operation.
- · Use wet. Cutting fluids are recommended, especially synthetic oils.
- Mount the wheel and let it run idle for one minute to verify it is not damaged.
- Always make sure the workpiece is securely clamped.
- Start the operation with linear feed or shallow depths.
- Some products have a required rotation direction—inspect the wheel before use to verify this point.
- · Always use the correct, clean, and well-maintained accessories, as product performance depends on this.
- Allow the wheel to run to expel excess coolant before turning it off.

#### 3. Safety information

- · Always follow the manufacturer's recommended operating
- Never exceed the maximum operating speed of the product.



- If used on a machine or station without a containment guard, always operate with a safety guard.
- Always wear full protective equipment (gloves, hearing) protection, mask, and safety glasses).
- Improper use may cause severe injury.
- For more detailed information, consult ANSI B7.1 and FEPA safety code.

#### 4. Handling

06 = Turquoise R = Profesional

- · Initial inspection must be carried out in the original packaging. If there is visible damage to the package, the goods must not be accepted.
- Handle the wheel carefully in its original packaging to prevent impacts or drops. If the wheel shows cracks, fractures, or visible damage, it must not be used and the manufacturer should be notified.

### 5. Storage

- Store the wheel on a flat surface. Do not drop or strike it. Store in a clean, dry, dust-free environment, preferably in its original packaging. Do not expose for long periods to hot, cold, or wet surfaces.
- For more information, consult ANSI B7.1.

#### 6. Packaging units

• 1 piece

www.austromex.com.mx