

Data Sheet

Item
2155



 
1. Product description:

Diamond Wheel for Grinding and Sharpening

Dimensions (in):	6" x 1/2" x 1-1/4"
Dimensions (mm):	150 x 12 x 31.75
Specification:	B120R75LBX8H02R
Max. rpm:	6,400
Line:	Easy-Cut®
Max. speed::	50 m/s



Type 1A1



D =	150	mm
T =	12	mm
H =	31.75	mm
X =	3.2	mm



Hard Steels

Certification

This wheel is certified by
the Organization for
the Safety of Abrasives.



Abrasive	Grit Size	Hardness	Concentration	Body	Bond	Internal Code	Identifier	Quality
CBN	120 = Fine	R = Medium	75 = Medium	L = Aluminum	B = Resin	X8H	02 = Orange	R = Profesional



1. Application



CNC Machine

- Specialized wheel for sharpening, honing of tools, grinding flat surfaces, and external cylindrical grinding of all types of hardened steels.
- For users where price is an important factor.

2. Operating instructions

- Inspect the product to ensure it is not cracked or damaged before starting operation.
- Use wet. Cutting fluids are recommended, especially synthetic oils.
- Mount the wheel and let it run idle for one minute to verify it is not damaged.
- Always make sure the workpiece is securely clamped.
- Start the operation with linear feed or shallow depths.
- Some products have a required rotation direction—inspect the wheel before use to verify this point.
- Always use the correct, clean, and well-maintained accessories, as product performance depends on this.
- Allow the wheel to run to expel excess coolant before turning it off.

3. Safety information

- Always follow the manufacturer's recommended operating instructions.
- Never exceed the maximum operating speed of the product.

- If used on a machine or station without a containment guard, always operate with a safety guard.
- Always wear full protective equipment (gloves, hearing protection, mask, and safety glasses).
- Improper use may cause severe injury.
- For more detailed information, consult ANSI B7.1 and FEPA safety code.

4. Handling

- Initial inspection must be carried out in the original packaging. If there is visible damage to the package, the goods must not be accepted.
- Handle the wheel carefully in its original packaging to prevent impacts or drops. If the wheel shows cracks, fractures, or visible damage, it must not be used and the manufacturer should be notified.

5. Storage

- Store the wheel on a flat surface. Do not drop or strike it. Store in a clean, dry, dust-free environment, preferably in its original packaging. Do not expose for long periods to hot, cold, or wet surfaces.
- For more information, consult ANSI B7.1.

6. Packaging units

- 1 piece

www.austromex.com.mx